




PRO1200/1500-59s/129s Memory Battery

Part# CR2032


Location#MainBoard

Description: Battery that allows board to retain information such as Designs in memory, machine parameters, Language setting.

To remove, locate the Main/Power board area as show below.
Remove the cover, which is fastened by 4 screws as shown.

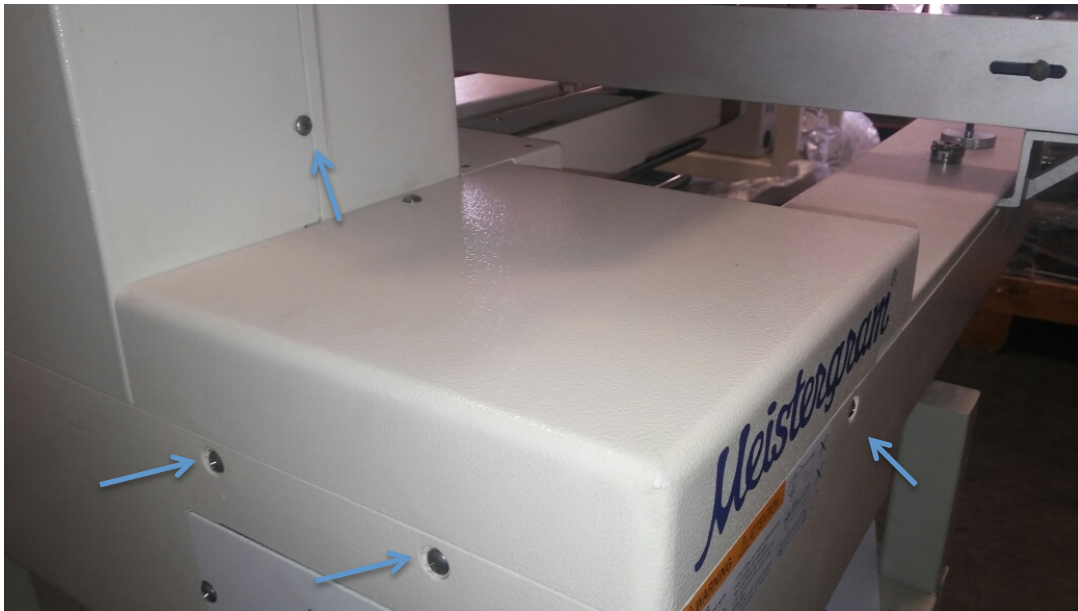

The first board seen will be the power board, in order to reach the mainboard, remove the 4 screws attaching the power board bracket as seen below.

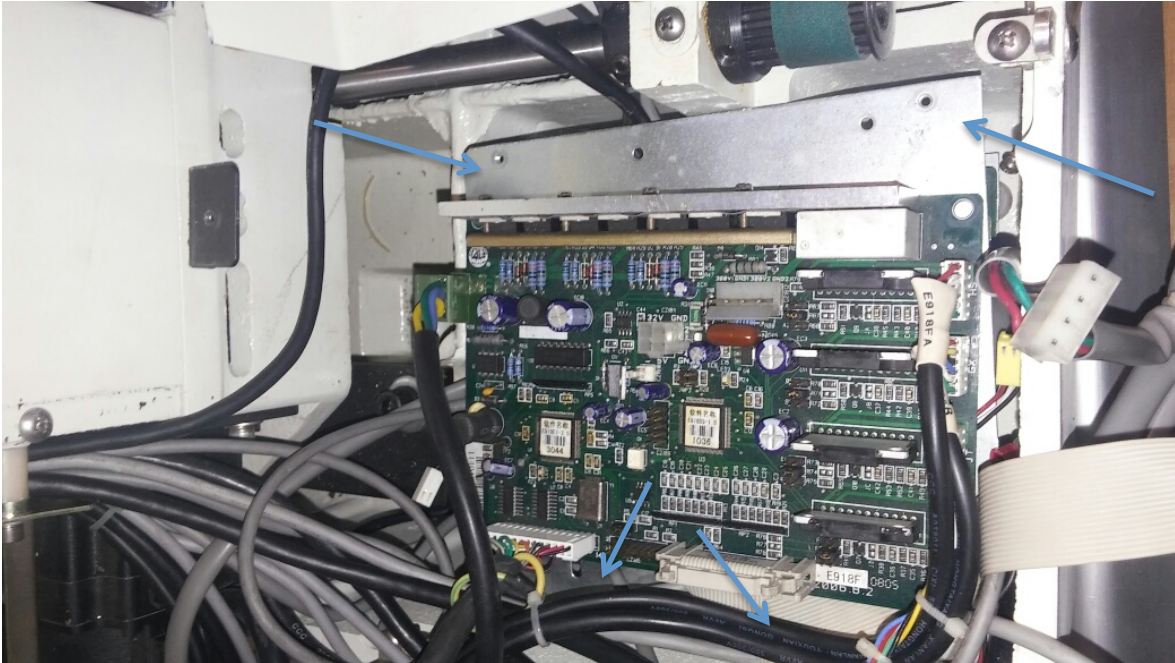

Remove the Power Board to reveal the Mainboard.



The battery is located on the MainBoard.
Remove and replace with a new CR2032.

